

KONIG & MEYER 14335 SAXOPHONE TENOR STAND BLACK

44,00 € tax included

Reference: KM14335

KONIG & MEYER 14335 SAXOPHONE TENOR
STAND BLACK



Practical, easy to use and stable stand for tenor saxophones. Solid square-type aluminum tubes with the large central locking screw, protective rubber bumps where stand connects with the saxophone body and the bell. Embedded foot end caps. Folds compactly, can be transported in the supplied velour bag in the saxophone bell.

Data:

- Adjustment: central locking screw
- Height: 425 mm
- Instrument support: non-marring plastic material
- Material: aluminum
- Special features: folds very small' easy-to-use' can be transported in the supplied velour bag in the saxophone bell' embedded foot end caps
- Suitable for: Bb tenor saxophones
- Type: black
- Weight: 0.36 kg